

QUICK START GUIDE
POCKET | **RIX**
SERIES

5 YEAR
WARRANTY
Thermal devices
Detector resolution ≥ 384

3 YEAR
WARRANTY
Thermal devices
Detector resolution ≤ 256

3 YEAR
WARRANTY
Digital devices

WARRANTY CARD

Please contact RIX's customer service team directly!

Whether you purchased the device from an dealer, the RIX official website, Amazon, or any other retailer, if there is any issue with your device, please contact RIX's professional customer service directly through the following methods. You will experience lightning-fast and worry-free customer service.

Visit

www.rixoptics.com

Email

support@rix-nv.com

Call


+1(800)580-5281

01 BATTERY INSTALLATION


- ▶ Push the switch to open the battery compartment cover.
- ▶ Put the 18650 battery into the battery compartment with the positive pole located inside.
- ▶ Press the battery compartment cover firmly and pull the latch up.



Step 1

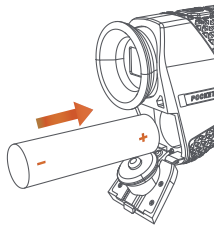

Step 2

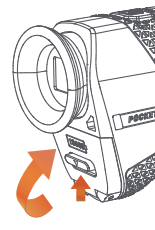

Step 3

02 COMPONENTS AND CONTROLS



Step 1: Open the lens cap
Press and hold the lens cap and push it downward.

Step 2: Power on
Long press to the Power Button on the device.

Step 3: Adjust diopter
Rotate the Diopter Adjuster knob until the display icon can be seen clearly.